


Step 1 cont.




Step 3

Align the hinges on **Part 5** to their corresponding openings on **Part 4**. Once aligned, use the **B** screws to attach **Part 5** to **Part 4**.

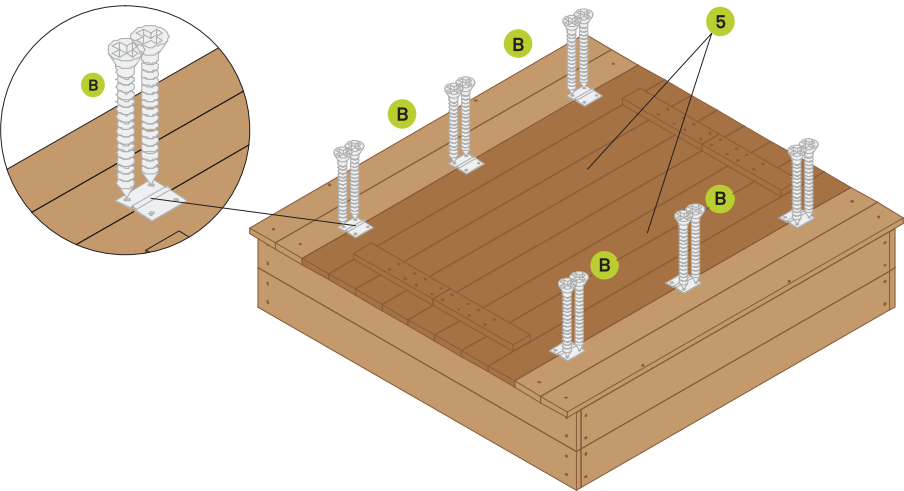


Step 2

Align both **Part 4** with the pre-drilled holes parrallel to **Part 2** as shown in the image below. Drill **Part 4** into **Part 2** using the **A** screws.

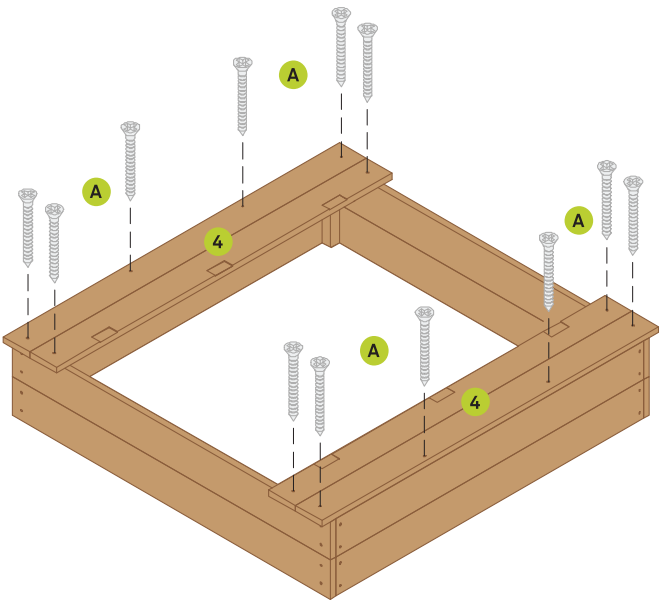

Step 4

Once **Part 5** is attached, fold them outward. Place **Part 6** under the sandpit before applying sand.

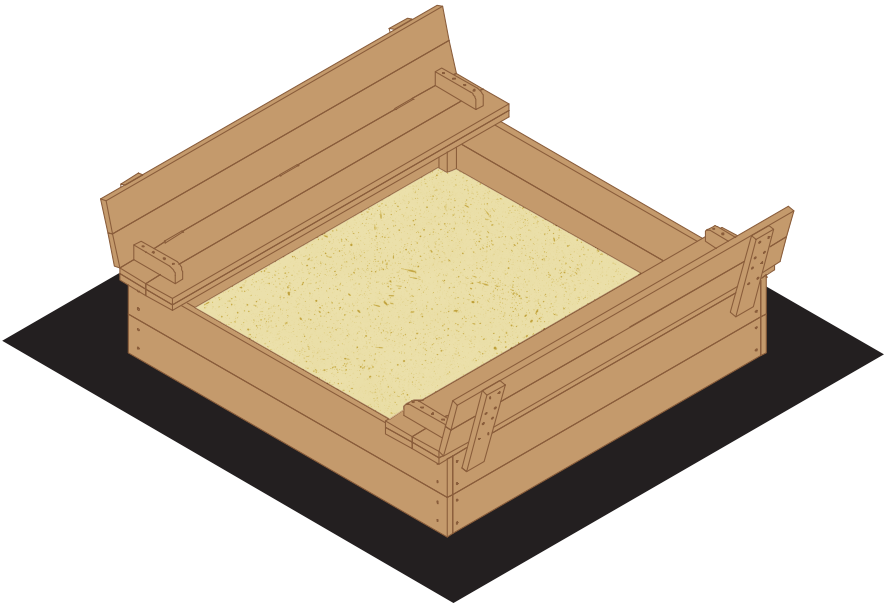

Lets us know if you have questions or concerns:

theteam@outwardplay.com
(310) 982-2991

